
# SL T2™ PADDING

#### **ENGINEERED PROTECTION THAT SURROUNDS**

Ensure ongoing comfort and hygiene in demanding work environments with the SL T2 Replacement Padding designed for the SL T2 Safety Helmet. This complete set includes crown, front and rear padding, allowing easy replacement when pads get dirty or sweaty.

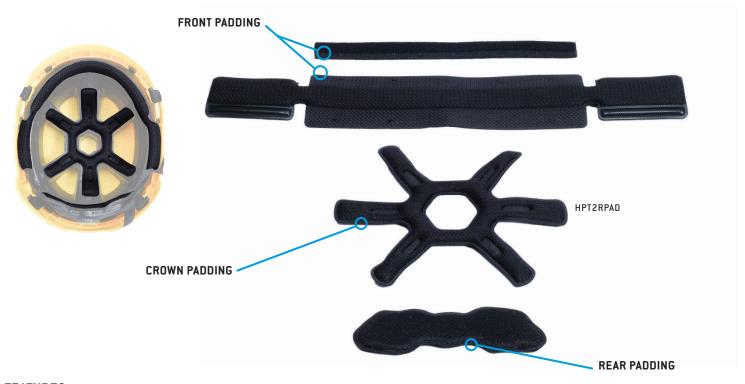

### **FEATURES**

Hygienic Solution: Enables wearer to effortlessly replace adirty or sweaty padding, promoting cleanliness and comfort

Enhanced Comfort: The padding set provides a comfortable fit and reduces pressure points during extended wear

Durable Construction: Made from high-quality materials, the padding set is built to withstand daily use

#### **INSTRUCTIONS**

## To Replace Crown Padding on Helmet

- 1. Pull the existing pad out of the helmet using the hook and loop tabs.
- 2. Align the circle of the new pad with the circle at the top of the helmet.
- 3. Press down each "arm" onto the hook and loop tab to secure the pad in place.

#### To Replace Front Padding on Suspension

- 1. Detach hook and loop connections from the sides of the suspension.
- 2. Detach the pegs of the sweatband from the front suspension.
- Pull the sweatband out from under the suspension and out of the helmet.
- 4. Unwrap padding and remove plastic peg holder.
- Add foam strip to replacement padding and place plastic peg holder on top.
- 6. Wrap padding around peg holder and press into place.
- 7. Align replacement sweatband with front of suspension.
- 8. Press pegs into place and wrap hook and loop closures around the side suspension.

## To Replace Rear Padding on Suspension

- 1. Remove both ends of the padding from around the suspension.
- 2. Pull the pad away from suspension.
- 3. Align both ends of the new padding around the suspension's sides.
- 4. Press the pad into the hook and loop connection point.



HPT2RPAD is replacement padding sold separately from the SLT2 Safety Helmet.

Updated as of 06.24